



RAN Mount installation process

1. The first thing you need to do when installing a RAN mount is to remove the bolts of the arms and base of the mount. They should be quite easy to remove, but in case they don't cooperate nicely, you could always use the custom screwdriver, that is delivered with the package.

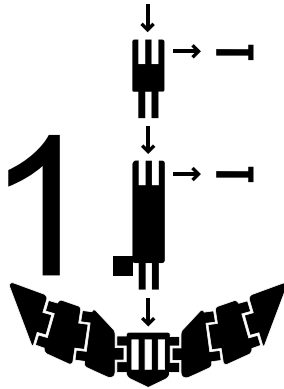

2. Next, you will have to decide how to mount your RAN mount. You can choose to attach your action camera directly on the base or use one of the arms, or both, to get the ideal distance and angles.

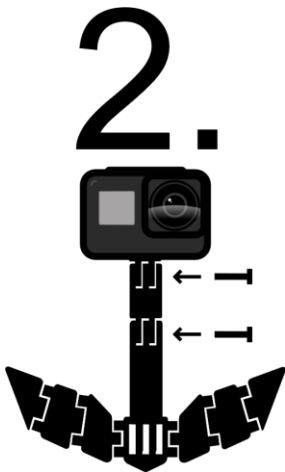

3. Once you are happy with the overall length and position of the mount, you can reinstall the bolts. Remember to use the screwdriver when tightening the bolts for maximum strength.



- Now it's time to install the mount on your helmet or another surface. Make sure the surface is smooth, clean and dry before attaching your mount. Always try to find the perfect position and get as much contact between the mount and the surface. It is advised to start with attaching the center base first, before attaching the wings. Also make sure there is enough tension between the individual wings in order to achieve maximum overall strength. It's also advised to allow the tape to cure for 24 hours. This way you will get the maximum hold.

